
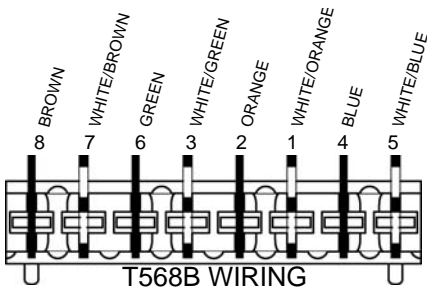
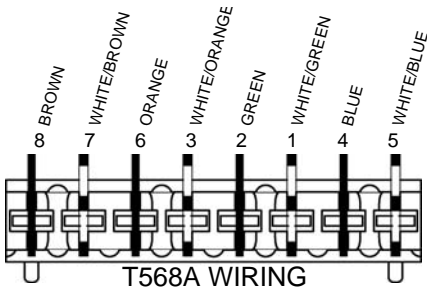
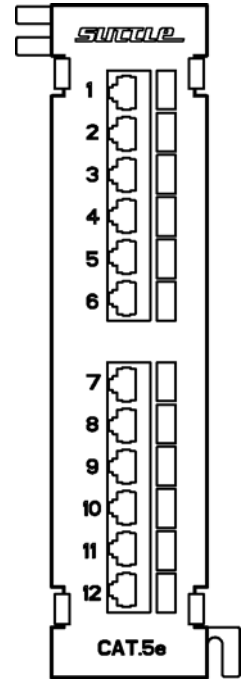



SUTTLE

Structured Cabling

2-7034-12
Patch Panel
Cat.5e - 12-Port

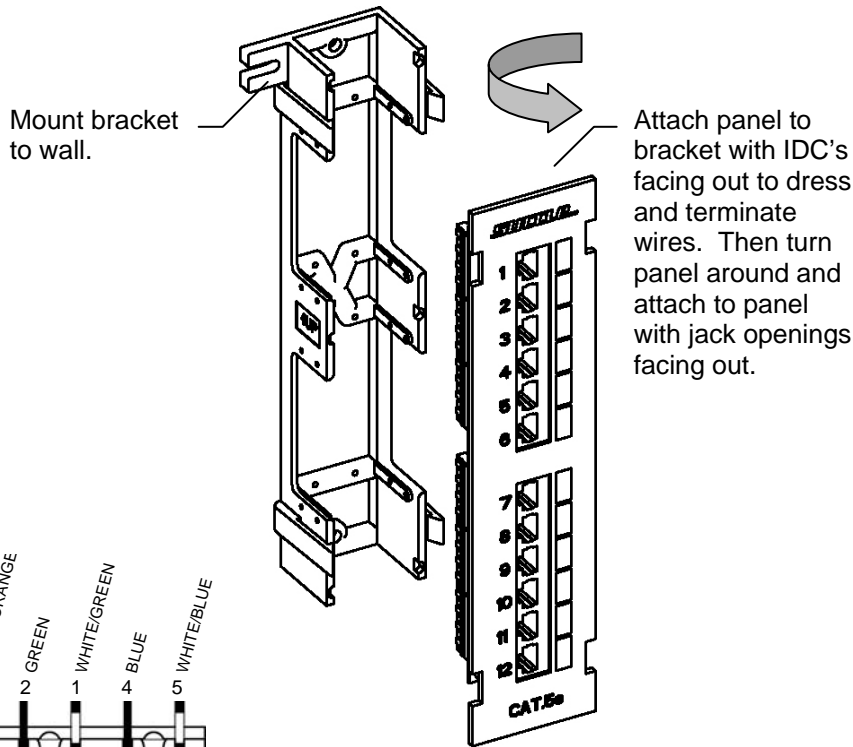

Route cables from bracket through top, bottom or sides.

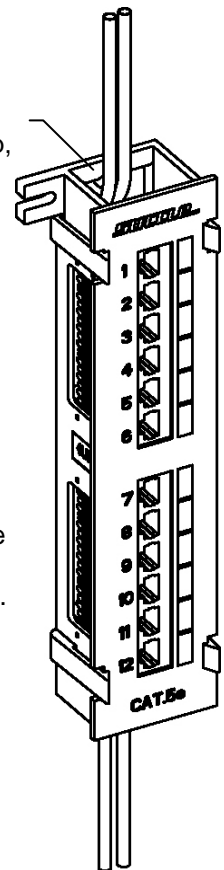

Terminate wires using an impact tool; make sure excess wires are trimmed.

Strip cable jacket approximately 1 1/2". Insert wires into IDC according to the desired wiring configuration (T568A / T568B). Do not untwist wire pairs more than 1/2" from termination point