


# ***SUTTLE***

## **SAM-V6D1      Voice/Data Module**

---

### **Installation & Instruction Guide**

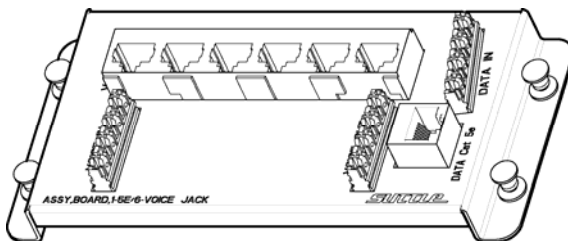

---

1001 East Hwy 212  
Hector, MN 55342  
[www.suttleonline.com](http://www.suttleonline.com)

Toll Free: 1-800-852-8662  
Local: 1-320-848-6711  
Fax: 320-848-2361

# Module Installation

---


## Mounting:

Align the mounting pins with the grid holes on the back of the enclosure. With the mounting pin plungers in the “out” position, press the unit into the grid in the desired location, secure by pushing the plungers in.

## Termination:

1. Each cable should be routed to the desired port location with 6 inches of additional cable for termination.
2. Strip back cable jacket approximately 4 inches exposing individual wire pairs. Insert each conductor into its appropriate IDC following wire diagram. On Data IDC, make sure each pair maintains its twist as close to the IDC as possible (1/2-inch max.) Use a 110 impact tool (not included) to fully seat and trim each conductor.
3. Loosely bundle the cables together. Wrap cable bundles and hook with loop straps provided with enclosure. Do not over tighten straps or cause sharp bends in the cable.

Brown	Brown
White/Brown	White/Brown
Orange	Green
White/Orange	White/Green
Green	Orange
White/Green	White/Orange
Blue	Blue
White/Blue	White/Blue
568A Wiring	568B Wiring

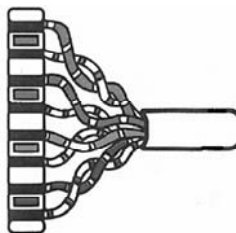

*NOTE: one pair of wires corresponds to each line from the phone company. (Line 1=blue, Line 2=orange, Line 3=green, Line 4=brown).*