

SUTTLE

www.suttleonline.com

1-800-852-8662

SPSA

Coaxial Cable Stripping Tool

CABLE PREP

1. Open the stripper jaws, as shown in figure 1.
2. Insert the coaxial cable until the end comes to the cable stop.
3. Release the stripper jaws and turn the stripper around the cable 3 to 5 times in both directions to cut the cable.
4. While the jaws are closed, pull the cable out of the stripper.
5. Open the jaws to remove the cut off scraps of material. Discard the scraps.
6. The adjustment knob can be set as shown in figure 2 for the best cut.

Stripper jaws
shown open

Cable stop

Figure 1

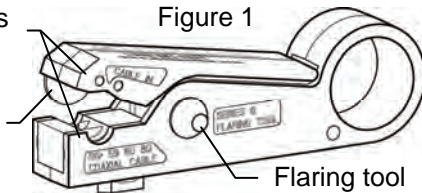



Figure 2

FLARING TOOL

1. Press the stripped cable end into the flaring tool to flare the braid away from the dielectric. (sized for rg6 cable)

BLADE CARTRIDGE REPLACEMENT

1. Open the stripper jaws.
2. Push the blade cartridge latch in and forward to push the blade cartridge out the front of the tool.

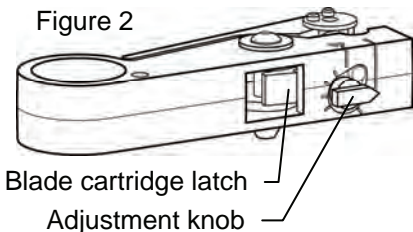

100910-00 Rev.A